





**DL3500-DH+/DH-485 CABLE WIRING**

**RS232 TO PC without Handshaking - CONNECTS 9 PIN SERIAL TO 9 PIN (PC) SERIAL PORT**

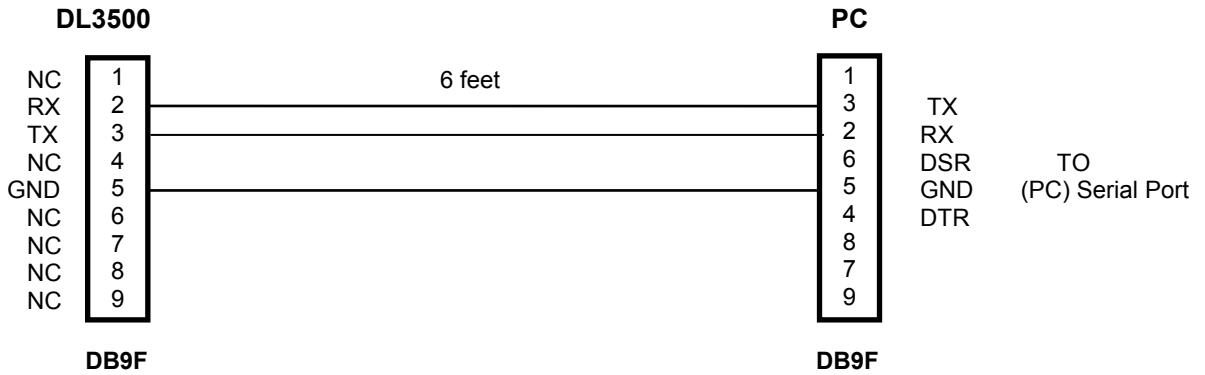


**RS232 TO PC with Handshaking - CONNECTS 9 PIN SERIAL TO 9 PIN (PC) SERIAL PORT**

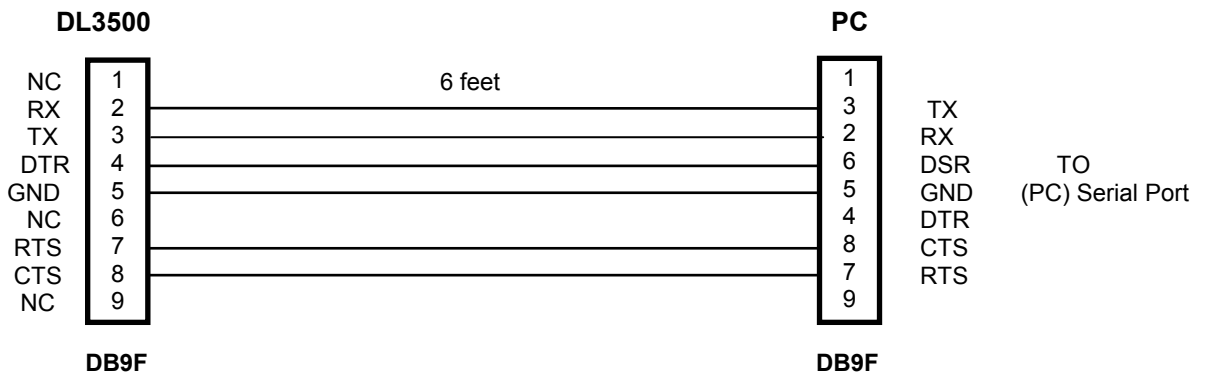

**CHANNEL A Connections**


**DL3500-CHA DH-485**

**Other DH-485 Nodes**

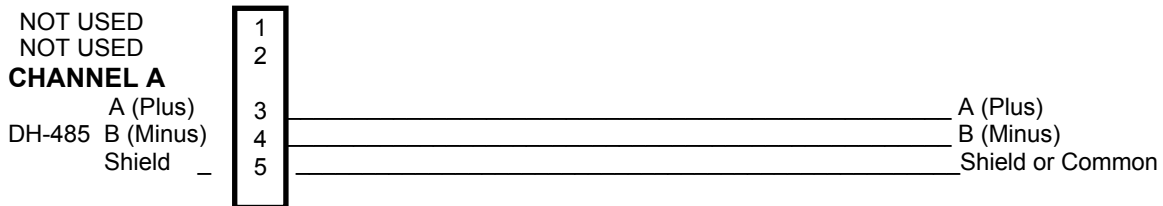

**DL3500-CHA DH+**

**Other DH+ Nodes**

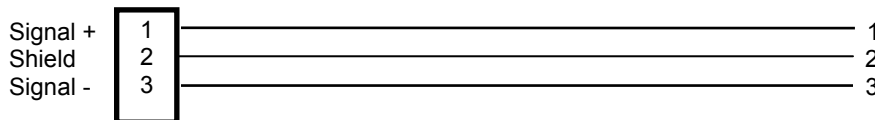

**NOTE: Phoenix Connectors are numbered from Left to Right looking at the TOP**