




Configure Online Parameters



EQ32 Configuration Software

DL6000

Welcome Screen
Welcome / Open Configuration

Modbus Parameters
Protocol Settings
Address Mapping

Finalize Settings
Apply Settings

Modbus Settings

The following settings are used to determine the type of Allan-Bradley processor messages will be sent to and if broadcast messages are to be sent to the Allan-Bradley network.

Modbus Device Type:

Destination Data Table Address Decoding

- SLC/PLC - NXY:Z
- SLC/PLC - NXYZ:Z
- Micrologix - NYXZ:Z

Configure Online Parameters



EQ32 Configuration Software

DL6000

Welcome Screen
Welcome / Open Configuration

Modbus Parameters
Protocol Settings
Address Mapping

Finalize Settings
Apply Settings

Apply Configuration Settings

To download the configuration settings to the gateway device, select the Download Configuration option and click the FINISH button. You may also save your configuration settings by selecting one of the other options available.

- Download Configuration
- Download and Save Configuration
- Save Configuration

