



Quickstart Procedure

**DL3500 (DC-powered/USB connected DIN rail Units)
Using DL32 V3.X for Windows 95/98/NT/ME/XP/2000.**

Please ensure that you have the correct cable when configuring the DL3500 through its DB9 serial port. If USB is used ensure that the Virtual Com Port (VCP) is set up under the Control Panel when the USB VCP driver has been installed. Please see the DL3500 users manual for cable diagrams and greater descriptions.


Step A – Install and Run DL32




1. Insert the Configuration CD and the selection screen should start up automatically. If it doesn't select RUN and then D:\cd-start.exe (where D is the drive letter of your CD drive)
2. Click on the DL32 V3.01 button to install DL32
3. From the start button, select 'Programs' and then 'DL Configuration Software and then 'DL32' to run the program.

Step B – Configuration Settings


<p>1. From the DL32 Welcome Screen click on the DL3500 Models button</p> <p>3. Select the Model of the DL3500 Being used. In this example we are going to select the DL3500-DF1</p>	<p>2. Depending on the SERIAL NUMBER of your DL3500 answer the question YES or NO.</p> <p>This setups the communication speed of the software.</p> <p>If you wish to use an external terminal emulator program such as HyperTerminal to setup the DL3500 the following is the settings:</p> <ul style="list-style-type: none"> • REVISION 2 boards used 19.2K,N,8,1 • REVISION 1 used 9600,N,8,1 • Both use XON/XOFF flow control.

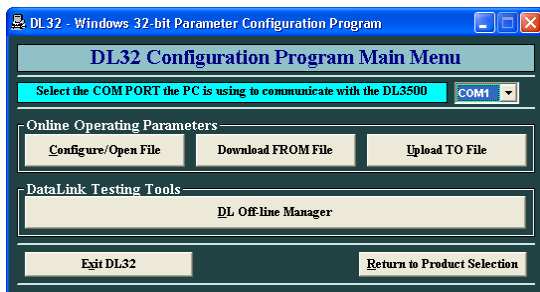

- From the DL32 'Main Menu' screen, first select the appropriate COM port the unit is connected to, and then click the CONFIGURE/ OPEN FILE button.

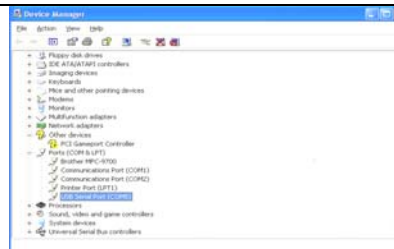

- If using the USB option you must first find out what COM port is assigned to your USB port. Open Control Panel, then enter into System then select the Device Manager and check to see which COM port your USB port has been assigned.

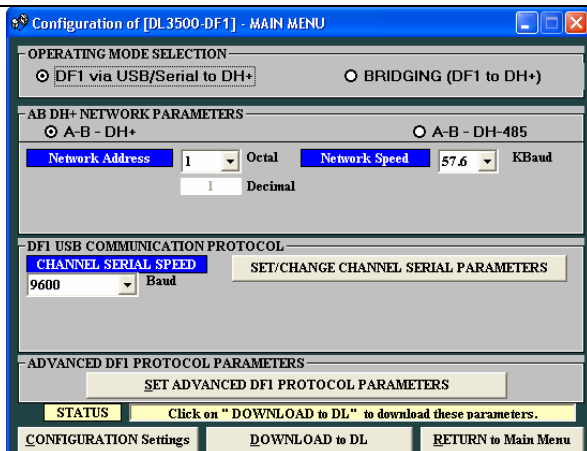

- From the Main configuration Menu,

A - Select the NETWORK PROTOCOL: Either DH+ or DH-485 (depends on the Model of DL3500 you have ordered)

For typical configurations select **A-B DH+**, the appropriate DH+ network speed, and the station number that the DL3500 will be occupying on the network (ensure that this station is available and that there are no conflicts with other devices or PLC's).

B - Under "DF1 Serial/USB Communication Protocol" set the channel serial speed. Higher speeds allow for faster communication. The maximum speed depends on the DF1 driver you are using. Some older software packages will cause the DL3500's buffers to fill if to high a speed is selected. At the outset, it is recommended that the default value of 9600 Baud be set be used.

C - Under **SET/CHANGE SERIAL PARAMETERS** and **SET DF1 ADVANCED PARAMETERS**, typical users will want to leave all the settings at their default values.

**When all options have been selected press the
DOWNLOAD TO DL BUTTON**

- In the **Status** Bar there should be an A-OK Parameters transferred successfully. Once this is seen, Select **Return to Main Menu** and then **Exit DL32** to exit the program.
- If you wish to save the **Configuration Settings** then select the **CONFIGURATION Settings** button and choose **Save Configuration Settings**.
- The DL3500 is ready for normal operation on your network. Hit the **RESET** button to bring the DL3500 On-Line.